


Enter the BeoLink Converter NL/ML tab **Configuration - Home Automation**.
In **Telegram forwarding** check 'Forward LIGHT/CONTROL commands'

Select 'mlgw' in Device drop-down.

Save

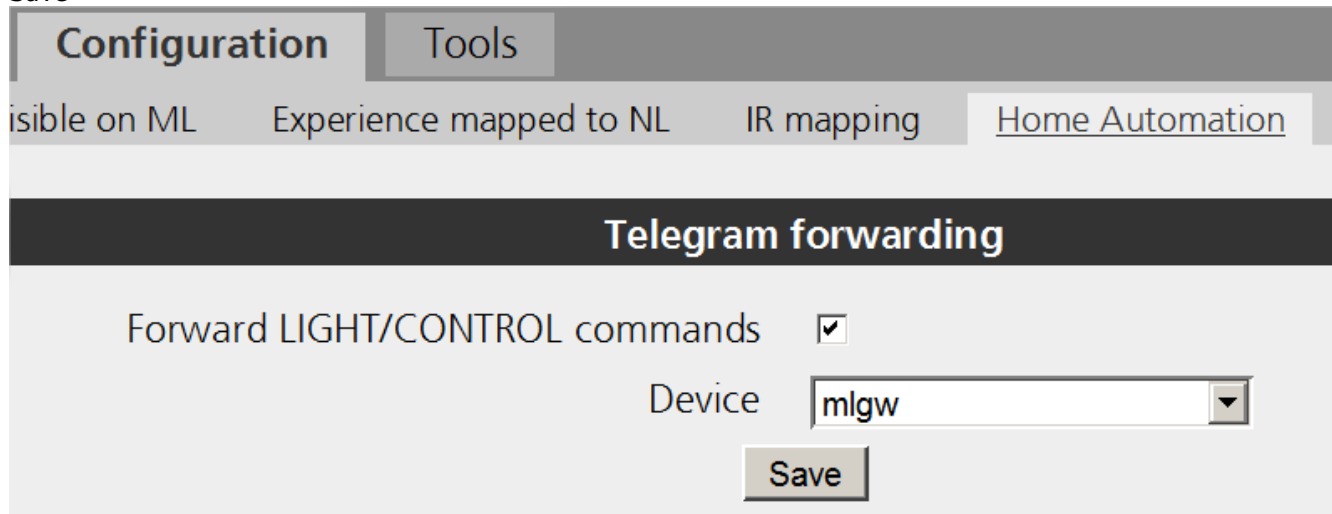

The screenshot shows a web-based configuration interface for a BeoLink Converter. At the top, there are two main tabs: 'Configuration' and 'Tools'. Under 'Configuration', there are four sub-tabs: 'Visible on ML', 'Experience mapped to NL', 'IR mapping', and 'Home Automation'. The 'Home Automation' sub-tab is currently selected. Below the sub-tabs, there is a dark grey header with the text 'Telegram forwarding'. Under this header, there are two settings: 'Forward LIGHT/CONTROL commands' with a checked checkbox, and 'Device' with a dropdown menu showing 'mlgw'. A 'Save' button is located below the 'Device' dropdown.

To make a proper setup of other IR, Master Link and Network Link related settings, please refer to latest **Installation Guide**: See BeoLink Converter NL/ML product page on BeoWise - view Installation section.